

RC Car Analog Battery Tester

 
OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack RC Car Analog Battery Tester is a sensitive, accurate tester for checking batteries. You can test AA and 9V alkaline, mercury, and rechargeable batteries as well as 6V, 7.2V, and 9.6V RC battery packs. Your tester has an easy-to-read analog display and does not require a test lead, making it easy to use.


OPERATION

Test batteries separately. Testing more than one at a time causes an inaccurate reading.


1. To check a 9V rectangular battery, insert the battery into the tester's left bay so the battery terminals are against the 9V positive (+) and negative (–) contacts.

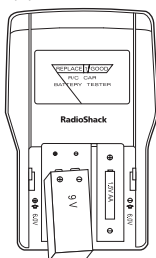

 To check an AA size battery, insert the battery into the tester's right bay so the battery terminals are against the AA positive (+) and negative (–) contacts.

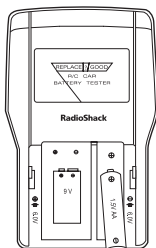


 To check a 6V RC car battery pack, insert and slide the battery pack up into the bay in front of the 9V and AA battery bays. Position the battery pack so it is against the contacts on the sides of the bay.

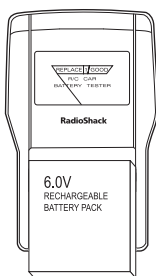


To check a 7.2V RC car battery pack, slide the switch on the side of the tester to 7.2V, then insert the connector on the bat-

 tery cable into the terminal jack on the side of the tester. Make sure the battery connector's locking tab is facing up.

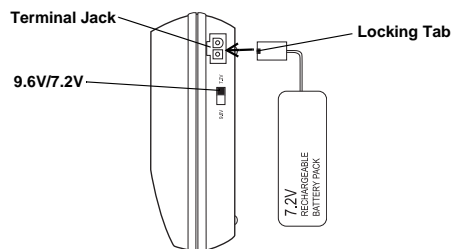

 To check a 9.6V RC car battery pack, slide the switch on the side of the tester to 9.6V, then insert the battery terminal into the terminal jack on the side of the tester. Make sure the battery connector's locking tab is facing up.

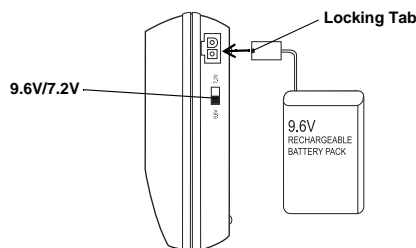

Note: Always identify the battery's polarity (+ and –) before testing it.

2. Read the scale to determine the battery's charge.

If the scale's needle points toward **GOOD**, the battery has considerable life left.

Note: When a fresh alkaline AA or 9V battery is tested, the scale's needle moves a little more to the right than the reading when a fully charged AA or 9V rechargeable is tested.

If the needle points toward **?**, the battery's strength is marginal. Consider replacing or recharging the battery.

If the needle points toward **REPLACE**, the battery must be replaced or recharged.

RadioShack stores offer a variety of batteries and battery chargers.

CARE

Keep the tester dry; if it gets wet, wipe it dry immediately. Use and store the tester only in normal temperature environments. Handle the tester carefully; do not drop it. Keep the tester away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the tester's internal components can cause a malfunction and might invalidate its warranty. If your tester is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99